



**Note: The Front, Rear and Side Flanges Fit Over the Roof Panel**

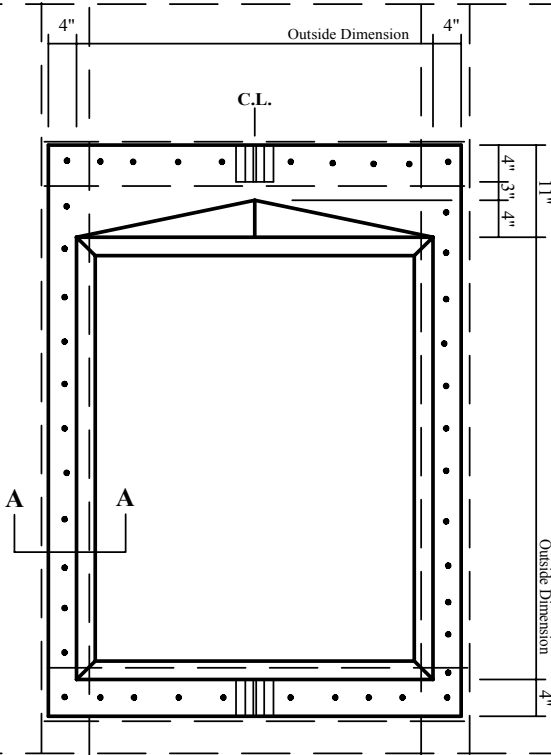

**PLAN VIEW**


### **CPM-3 Installation Instructions**

- (1) Using curb rib locations as a guide, layout and mark roof openings on completed roof deck, using outside curb width by outside curb length, plus 7" uphill (cricket plus 3")
- (2) Install structural support framing for curb and equipment loads beneath curb walls and flanges around opening. Keep inside curb dimension clear. Do not fasten support framing to fixed structural members on sliding standing seam roofs.
- (3) Turn curb upside down and apply tape caulk on curb flanges.
- (4) Press the curb in place on the roof deck. Fasten curb to support channel through roof curb flange and roof deck using suitable fasteners. Use a minimum of (4) fasteners per side spaced on 3" centers or less. Fasteners should withstand a minimum #150 lbs., each.
- (5) Seal edge of the roof curb flange with polyurethane caulk to assure a watertight weather seal.

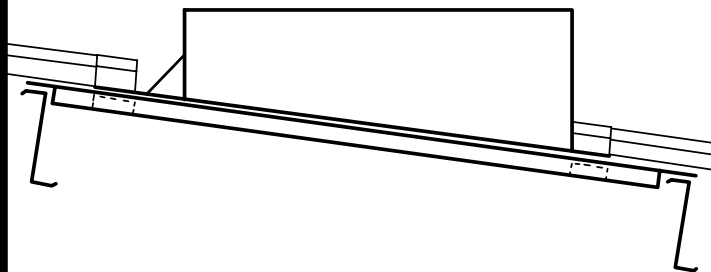

**\* Do not fasten support framing to any fixed structural members on sliding standing seam roofs**

**ELEVATION VIEW**

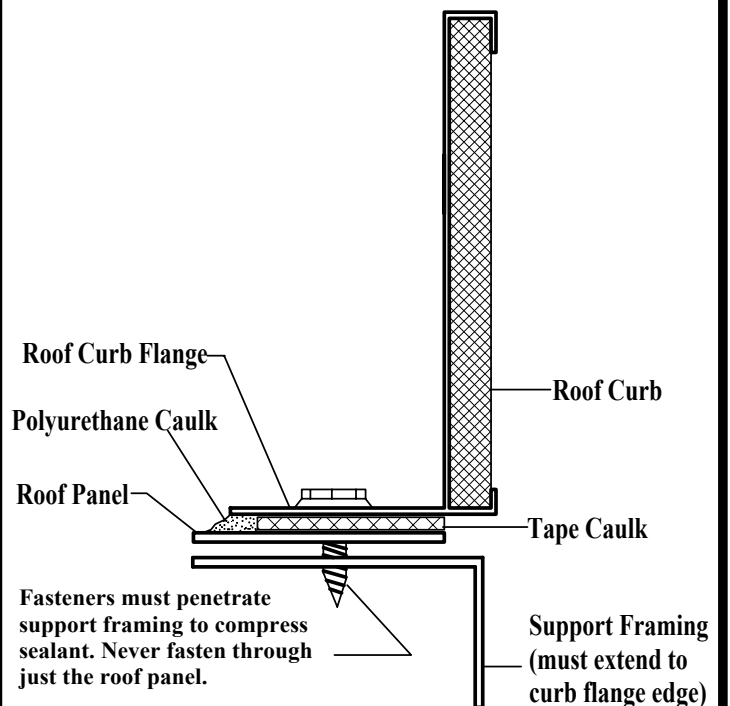

**Section AA**